

# Printer Compatibility List

Update:2014.10.09

| Printer Manufacture | Printer Model                | TL-PS110U 2.0 | TL-WPS510U | TL-PS110P |
|---------------------|------------------------------|---------------|------------|-----------|
| HP                  | Business InkJet 1000         | OK            | OK         |           |
| HP                  | Color Laserjet 1500L         | OK            | OK         |           |
| HP                  | Color Laserjet 1600          | OK            | OK         |           |
| HP                  | Color Laserjet 2500          | OK            | OK         | OK        |
| HP                  | Color LaserJet 2550          | OK            | OK         | OK        |
| HP                  | Color LaserJet 2550L/LN      | OK            | OK         |           |
| HP                  | Color LaserJet 2600          | OK            | OK         |           |
| HP                  | Color LaserJet 2605          | OK            | OK         | OK        |
| HP                  | Color LaserJet 2700n         | OK            | OK         |           |
| HP                  | Color LaserJet 2840          | OK            | OK         |           |
| HP                  | Color LaserJet 3700          | OK            | OK         | OK        |
| HP                  | Color LaserJet 4000          |               |            | OK        |
| HP                  | Color LaserJet 4100          |               |            | OK        |
| HP                  | Color LaserJet 4500          |               |            | OK        |
| HP                  | Color Laserjet 4650          | OK            | OK         | OK        |
| HP                  | Color LaserJet 8550          |               |            | OK        |
| HP                  | Color Laserjet CP1215        | OK            | OK         |           |
| HP                  | Color Laserjet CP1525nw      | OK            | OK         |           |
| HP                  | Color Laserjet CM1312 MFP    | OK            | OK         |           |
| HP                  | Color Laserjet CM1015 MFP    | OK            | OK         |           |
| HP                  | Designjet 100                | OK            | OK         | OK        |
| HP                  | Designjet 600                |               |            | OK        |
| HP                  | Designjet 650C               |               |            | OK        |
| HP                  | Designjet 700                |               |            | OK        |
| HP                  | Designjet 750C+              |               |            | OK        |
| HP                  | DeskJet 1120C                |               |            | OK        |
| HP                  | Deskjet 1125C                | OK            | OK         | OK        |
| HP                  | Deskjet 1180C                | OK            | OK         | OK        |
| HP                  | DeskJet 1280                 | OK            | OK         | OK        |
| HP                  | Deskjet 2000 J210            | OK            | OK         |           |
| HP                  | Deskjet Ink Advantage 2020hc | OK            | OK         |           |
| HP                  | Deskjet 2050                 | OK            | OK         |           |
| HP                  | Deskjet 2510                 | OK            | OK         |           |
| HP                  | Deskjet IA 2520hc            | OK            | OK         |           |
| HP                  | Deskjet 2540                 | OK            | OK         |           |
| HP                  | Deskjet 3000                 | OK            | OK         |           |
| HP                  | Deskjet 3070A                | OK            | OK         |           |
| HP                  | Deskjet 3050                 | OK            | OK         |           |
| HP                  | Deskjet 3325                 | OK            | OK         |           |
| HP                  | DeskJet 3420                 | OK            | OK         |           |
| HP                  | Deskjet 3520                 | OK            | OK         |           |
| HP                  | Deskjet 3535                 | OK            | OK         |           |
| HP                  | Deskjet 3650                 | OK            | OK         |           |
| HP                  | Deskjet 3743                 | OK            | OK         |           |
| HP                  | Deskjet 3748                 | OK            | OK         |           |
| HP                  | Deskjet 3820                 | OK            | OK         | OK        |

|    |                     |    |    |           |
|----|---------------------|----|----|-----------|
| HP | DeskJet 3920        | OK | OK |           |
| HP | DeskJet 3940        | OK | OK |           |
| HP | DeskJet 400/420     |    |    | OK        |
| HP | Deskjet 450C        | OK | OK | OK        |
| HP | DeskJet 5440        | OK | OK |           |
| HP | DeskJet 5500        |    |    | <b>OK</b> |
| HP | Deskjet 5550        | OK | OK | OK        |
| HP | Deskjet 5652        | OK | OK | OK        |
| HP | Deskjet 670C        |    |    | OK        |
| HP | Deskjet 680C        |    |    | OK        |
| HP | Deskjet 720C        |    |    | OK        |
| HP | Deskjet 810C        | OK | OK | OK        |
| HP | Deskjet 830C        | OK | OK | OK        |
| HP | Deskjet 845C        | OK | OK |           |
| HP | DeskJet 9300        | OK | OK | OK        |
| HP | Deskjet 948c        | OK | OK | OK        |
| HP | Deskjet 9600        | OK | OK | OK        |
| HP | Deskjet 9650        | OK | OK | OK        |
| HP | Deskjet 970c XI     | OK | OK | OK        |
| HP | Deskjet 9800        | OK | OK | OK        |
| HP | Deskjet D1560       | OK | OK |           |
| HP | Deskjet D2560       | OK | OK |           |
| HP | Deskjet D5560       | OK | OK |           |
| HP | DeskJet F370        | OK | OK |           |
| HP | DeskJet F380        | OK | OK |           |
| HP | DeskJet F4185       | OK | OK |           |
| HP | DeskJet F4280       | OK | OK |           |
| HP | Deskjet F4480       | OK | OK |           |
| HP | Laserjet Pro M401n  | OK | OK |           |
| HP | Laserjet M1005 MFP  | OK | OK |           |
| HP | LaserJet 1022       | OK | OK |           |
| HP | LaserJet 1022N      | OK | OK |           |
| HP | Laserjet 1100       |    |    | OK        |
| HP | LaserJet 1160       | OK | OK | OK        |
| HP | LaserJet 1200       | OK | OK | OK        |
| HP | LaserJet 1220       | OK | OK | OK        |
| HP | Laserjet 1300       | OK | OK | OK        |
| HP | Laserjet 1320       | OK | OK | OK        |
| HP | Laserjet M1522n MFP | OK | OK |           |
| HP | LaserJet 2100       |    |    | OK        |
| HP | Laserjet 2200d      | OK | OK | OK        |
| HP | Laserjet 2300       | OK | OK | OK        |
| HP | LaserJet 2410       | OK | OK | OK        |
| HP | LaserJet 2420       | OK | OK | OK        |
| HP | LaserJet 2550       | OK | OK | OK        |
| HP | LaserJet 3015       | OK | OK | OK        |
| HP | LaserJet 3050       | OK | OK |           |
| HP | LaserJet 3055       | OK | OK |           |
| HP | Laserjet 3200       | OK | OK | OK        |
| HP | Laserjet 3330       | OK | OK | OK        |

|    |                                 |    |    |    |
|----|---------------------------------|----|----|----|
| HP | LaserJet 3330mfp                | OK | OK | OK |
| HP | LaserJet 3380                   | OK | OK |    |
| HP | Laserjet 4000                   |    |    | OK |
| HP | LaserJet 4050                   |    |    | OK |
| HP | Laserjet 4100 /4100n            |    |    | OK |
| HP | LaserJet 4250                   | OK | OK | OK |
| HP | Laserjet 4300n                  |    |    | OK |
| HP | Laserjet 4300tn/dtn             |    |    | OK |
| HP | Laserjet Color 4500             |    |    | OK |
| HP | Laserjet 4650                   | OK | OK | OK |
| HP | Laserjet 5100fn/tn              |    |    | OK |
| HP | Laserjet 5100le/se              |    |    | OK |
| HP | Laserjet 6P / 6L                |    |    | OK |
| HP | Laserjet 8100                   |    |    | OK |
| HP | Laserjet M1005                  | OK | OK |    |
| HP | Laserjet M1005 MFP              | OK | OK |    |
| HP | Laserjet M1120 MFP              | OK | OK |    |
| HP | LaserJet M1319F MFP             | OK | OK |    |
| HP | LaserJet P2015                  | OK | OK |    |
| HP | Laserjet Pro M127fn             | OK | OK |    |
| HP | Laserjet Pro M1536dnf           | OK | OK |    |
| HP | Laserjet Pro M425dn MFP         | OK | OK |    |
| HP | Laserjet Pro M521dn             | OK | OK |    |
| HP | Officejet J3608 150 Mobile L511 | OK | OK |    |
| HP | Officejet J3608                 | OK | OK |    |
| HP | Officejet 2620                  | OK | OK |    |
| HP | OfficeJet 4255                  | OK | OK |    |
| HP | Officejet 4500                  | OK | OK |    |
| HP | Officejet 4610                  | OK | OK |    |
| HP | Officejet 4620                  | OK | OK |    |
| HP | Officejet 4630                  | OK | OK |    |
| HP | OfficeJet 5610                  | OK | OK |    |
| HP | Officejet J5780                 | OK | OK |    |
| HP | OfficeJet 6210                  | OK | OK |    |
| HP | OfficeJet 6310                  | OK | OK |    |
| HP | Officejet 6000                  | OK | OK |    |
| HP | Officejet 6100 eP               | OK | OK |    |
| HP | Officejet 6500                  | OK | OK |    |
| HP | Officejet 6600                  | OK | OK |    |
| HP | Officejet 6700                  | OK | OK |    |
| HP | Officejet 7000                  |    |    |    |
| HP | Officejet 7500A                 | OK | OK |    |
| HP | OfficeJet 7210                  | OK | OK |    |
| HP | OfficeJet J4580                 | OK | OK |    |
| HP | Officejet J4660                 | OK | OK |    |
| HP | Officejet J6480                 | OK | OK |    |
| HP | Officejet K7100                 | OK | OK |    |
| HP | OfficeJet K850                  | OK | OK | OK |
| HP | OfficeJet Pro K5300             | OK | OK |    |
| HP | OfficeJet Pro K550              | OK | OK |    |

|    |                          |    |    |  |
|----|--------------------------|----|----|--|
| HP | OfficeJet Pro K8600      | OK | OK |  |
| HP | Officejet Pro L7380      | OK | OK |  |
| HP | Officejet Pro L7590      | OK | OK |  |
| HP | Officejet Pro 6500A Plus | OK | OK |  |
| HP | Officejet Pro 7000       | OK | OK |  |
| HP | Officejet Pro 8000       | OK | OK |  |
| HP | Officejet Pro 8100       | OK | OK |  |
| HP | Officejet Pro 8500A Plus | OK | OK |  |
| HP | Officejet Pro 8500W      | OK | OK |  |
| HP | Officejet Pro 8600       | OK | OK |  |
| HP | Officejet Pro 8600 Plus  | OK | OK |  |
| HP | Photosmart 2610          | OK | OK |  |
| HP | Photosmart 3110          | OK | OK |  |
| HP | Photosmart 5510          | OK | OK |  |
| HP | Photosmart 5520          | OK | OK |  |
| HP | Photosmart 6510          | OK | OK |  |
| HP | Photosmart 6520          | OK | OK |  |
| HP | Photosmart 7150          | OK | OK |  |
| HP | Photosmart 7200          | OK | OK |  |
| HP | Photosmart 7510          | OK | OK |  |
| HP | Photosmart 7550          | OK | OK |  |
| HP | Photosmart 7660          | OK | OK |  |
| HP | Photosmart 7830          | OK | OK |  |
| HP | Photosmart 7900          | OK | OK |  |
| HP | Photosmart 8200          | OK | OK |  |
| HP | Photosmart Plus B209a    | OK | OK |  |
| HP | Photosmart Plus B210a    | OK | OK |  |
| HP | Photosmart Plus C310a    | OK | OK |  |
| HP | Photosmart A520          | OK | OK |  |
| HP | Photosmart B109a         | OK | OK |  |
| HP | Photosmart B110a AIO     | OK | OK |  |
| HP | Photosmart C309a         | OK | OK |  |
| HP | Photosmart C410a         | OK | OK |  |
| HP | Photosmart C3180         | OK | OK |  |
| HP | Photosmart C4180         | OK | OK |  |
| HP | Photosmart C4280         | OK | OK |  |
| HP | Photosmart C4385         | OK | OK |  |
| HP | Photosmart C4480         | OK | OK |  |
| HP | Photosmart C4580         | OK | OK |  |
| HP | Photosmart C5180         | OK | OK |  |
| HP | Photosmart C5280         | OK | OK |  |
| HP | Photosmart C5380         | OK | OK |  |
| HP | Photosmart C6180         | OK | OK |  |
| HP | Photosmart C6280         | OK | OK |  |
| HP | Photosmart C6380         | OK | OK |  |
| HP | Photosmart C7180         | OK | OK |  |
| HP | Photosmart C7280         | OK | OK |  |
| HP | Photosmart C8180         | OK | OK |  |
| HP | Photosmart D5160         | OK | OK |  |
| HP | Photosmart D5360         | OK | OK |  |

|       |                          |    |    |    |
|-------|--------------------------|----|----|----|
| HP    | Photosmart D5460         | OK | OK |    |
| HP    | Photosmart D7160         | OK | OK |    |
| HP    | Photosmart D7260         | OK | OK |    |
| HP    | Photosmart D7360         | OK | OK |    |
| HP    | Photosmart Premium C309g | OK | OK |    |
| HP    | Photosmart Premium C310g | OK | OK |    |
| HP    | PSC 1210                 |    |    |    |
| HP    | PSC 1315                 | OK | OK |    |
| HP    | PSC 1350                 | OK | OK |    |
| HP    | PSC 1410                 | OK | OK |    |
| HP    | PSC 1610                 | OK | OK |    |
| HP    | PSC 2210                 | OK | OK |    |
| HP    | PSC 2310                 | OK | OK |    |
| EPSON | Aculaser C1100SE         | OK | OK | OK |
| EPSON | Aculaser C1600           | OK | OK |    |
| EPSON | Aculaser C1700           | OK | OK |    |
| EPSON | Aculaser C1750N          | OK | OK |    |
| EPSON | Aculaser C1750W          | OK | OK |    |
| EPSON | Aculaser C1900           | OK | OK | OK |
| EPSON | Aculaser C2900           | OK | OK |    |
| EPSON | Aculaser C3800           | OK | OK |    |
| EPSON | Aculaser C3900N          | OK | OK |    |
| EPSON | Aculaser C9100           | OK | OK |    |
| EPSON | Aculaser CX16NF          | OK | OK |    |
| EPSON | Aculaser CX17NF          | OK | OK |    |
| EPSON | Aculaser M1400           | OK | OK |    |
| EPSON | Aculaser M2010DN         | OK | OK |    |
| EPSON | Aculaser M2010D          | OK | OK | OK |
| EPSON | Aculaser M2310D          | OK | OK | OK |
| EPSON | Aculaser M2310DN         | OK | OK |    |
| EPSON | Aculaser M2410D          | OK | OK | OK |
| EPSON | Aculaser M2410DN         | OK | OK |    |
| EPSON | Aculaser MX14            | OK | OK |    |
| EPSON | Aculaser MX14NF          | OK | OK |    |
| EPSON | AL-M200DN                | OK | OK |    |
| EPSON | AL-M7000                 | OK | OK |    |
| EPSON | AL-M8000                 | OK | OK | OK |
| EPSON | AL-MX200DWF              | OK | OK |    |
| EPSON | B-508DN                  | OK | OK |    |
| EPSON | B-518DN                  | OK | OK |    |
| EPSON | C750                     | OK | OK | OK |
| EPSON | CC-500L                  | OK | OK |    |
| EPSON | CL-760                   | OK | OK |    |
| EPSON | E-300L                   | OK | OK |    |
| EPSON | E-520                    | OK | OK |    |
| EPSON | E-720                    | OK | OK |    |
| EPSON | EC-01                    | OK | OK |    |
| EPSON | EPL 5700                 |    |    | OK |
| EPSON | EPL 5700                 |    |    | OK |
| EPSON | EPL 5800                 | OK | OK | OK |

|       |                |    |    |    |
|-------|----------------|----|----|----|
| EPSON | EPL 5800       | OK | OK | OK |
| EPSON | EPL 5900       | OK | OK | OK |
| EPSON | EPL 6100       | OK | OK | OK |
| EPSON | EPL 6200       | OK | OK | OK |
| EPSON | EPL N2120      |    |    | OK |
| EPSON | K100           | OK | OK |    |
| EPSON | L110           | OK | OK |    |
| EPSON | L120           | OK | OK |    |
| EPSON | L200           | OK | OK |    |
| EPSON | L210           | OK | OK |    |
| EPSON | L350           | OK | OK |    |
| EPSON | L355           | OK | OK |    |
| EPSON | L300           | OK | OK |    |
| EPSON | L550           | OK | OK |    |
| EPSON | L555           | OK | OK |    |
| EPSON | L800           | OK | OK |    |
| EPSON | L1300          | OK | OK |    |
| EPSON | L1800          | OK | OK |    |
| EPSON | LP2500         | OK | OK |    |
| EPSON | LP-7700        | OK | OK |    |
| EPSON | LP-8700        | OK | OK |    |
| EPSON | LP-8800C       | OK | OK |    |
| EPSON | LP8900         | OK | OK |    |
| EPSON | LP-9500C       | OK | OK |    |
| EPSON | LQ 100         |    |    | OK |
| EPSON | LQ 1000C       |    |    | OK |
| EPSON | LQ 1170+       |    |    | OK |
| EPSON | LQ 1170C       |    |    | OK |
| EPSON | LQ 1170C+      |    |    | OK |
| EPSON | LQ 2070C       |    |    | OK |
| EPSON | LQ 2080C       |    |    | OK |
| EPSON | LQ 2090        |    |    | OK |
| EPSON | LQ 2090C       | OK | OK | OK |
| EPSON | LQ 2170C       |    |    | OK |
| EPSON | LQ 2180C       |    |    | OK |
| EPSON | LQ 2190C       | OK | OK | OK |
| EPSON | LQ 2550        |    |    | OK |
| EPSON | LQ 300         |    |    | OK |
| EPSON | LQ 300+        |    |    | OK |
| EPSON | LQ 300+II      | OK | OK | OK |
| EPSON | LQ-310         | OK | OK | OK |
| EPSON | LQ 3500C       |    |    | OK |
| EPSON | LQ 570C        |    |    | OK |
| EPSON | LQ 670         |    |    | OK |
| EPSON | LQ 680         |    |    | OK |
| EPSON | LQ 680C        |    |    | OK |
| EPSON | M105           | OK | OK |    |
| EPSON | ME 320         | OK | OK |    |
| EPSON | ME 340         | OK | OK |    |
| EPSON | ME Office 82WD | OK | OK |    |



|       |                   |    |    |  |
|-------|-------------------|----|----|--|
| EPSON | ME Office 900WD   | OK | OK |  |
| EPSON | ME Office 940FW   | OK | OK |  |
| EPSON | ME Office 960FWD  | OK | OK |  |
| EPSON | MC-2000           | OK | OK |  |
| EPSON | PictureMate PM250 | OK | OK |  |
| EPSON | PLQ-20C           | OK | OK |  |
| EPSON | PLQ-20CM          | OK | OK |  |
| EPSON | PM-860PT          | OK | OK |  |
| EPSON | PM-890C           | OK | OK |  |
| EPSON | PM-920C           | OK | OK |  |
| EPSON | PM-930C           | OK | OK |  |
| EPSON | PM-950C           | OK | OK |  |
| EPSON | PM-970C           | OK | OK |  |
| EPSON | PM-980C           | OK | OK |  |
| EPSON | PM-A550           | OK | OK |  |
| EPSON | PM-A620           | OK | OK |  |
| EPSON | PM-A650           | OK | OK |  |
| EPSON | PM-A720           | OK | OK |  |
| EPSON | PM-A820           | OK | OK |  |
| EPSON | PM-A840           | OK | OK |  |
| EPSON | PM-A850           | OK | OK |  |
| EPSON | PM-A890           | OK | OK |  |
| EPSON | PM-A900           | OK | OK |  |
| EPSON | PM-A920           | OK | OK |  |
| EPSON | PM-A940           | OK | OK |  |
| EPSON | PM-A950           | OK | OK |  |
| EPSON | PM-A970           | OK | OK |  |
| EPSON | PM-2200C          | OK | OK |  |
| EPSON | PM-3500C          | OK | OK |  |
| EPSON | PM-3700C          | OK | OK |  |
| EPSON | PM-4000PX         | OK | OK |  |
| EPSON | PM-D800           | OK | OK |  |
| EPSON | PM-D870           | OK | OK |  |
| EPSON | PM-D1000          | OK | OK |  |
| EPSON | PM-FA700          | OK | OK |  |
| EPSON | PM-G800           | OK | OK |  |
| EPSON | PM-G820           | OK | OK |  |
| EPSON | PM-G850           | OK | OK |  |
| EPSON | PM-G860           | OK | OK |  |
| EPSON | PM-G4500          | OK | OK |  |
| EPSON | PM-T960           | OK | OK |  |
| EPSON | PM-T990           | OK | OK |  |
| EPSON | PX-5000           | OK | OK |  |
| EPSON | PX-A640           | OK | OK |  |
| EPSON | PX-A740           | OK | OK |  |
| EPSON | PX-G5300          | OK | OK |  |
| EPSON | PX-G5100          | OK | OK |  |
| EPSON | PX-G930           | OK | OK |  |
| EPSON | PX-G5000          | OK | OK |  |
| EPSON | PX-V780           | OK | OK |  |

|       |                       |    |    |    |
|-------|-----------------------|----|----|----|
| EPSON | RX 510                | OK | OK |    |
| EPSON | RX 530                | OK | OK |    |
| EPSON | RX 590                | OK | OK |    |
| EPSON | RX 630                | OK | OK |    |
| EPSON | RX 690                | OK | OK |    |
| EPSON | Stylus C20            | OK | OK |    |
| EPSON | Stylus C40            | OK | OK |    |
| EPSON | Stylus C41UX/SX       | OK | OK |    |
| EPSON | Stylus C43UX          | OK | OK |    |
| EPSON | Stylus C45            | OK | OK |    |
| EPSON | Stylus C59            | OK | OK |    |
| EPSON | Stylus C60            | OK | OK | OK |
| EPSON | Stylus C63            | OK | OK | OK |
| EPSON | Stylus C67            | OK | OK | OK |
| EPSON | Stylus C79            | OK | OK |    |
| EPSON | Stylus C83            |    |    | OK |
| EPSON | Stylus C90            | OK | OK |    |
| EPSON | Stylus Color 1160     | OK | OK |    |
| EPSON | Stylus Color 1500     | OK | OK |    |
| EPSON | Stylus Color 1520     | OK | OK |    |
| EPSON | Stylus Color 400      |    |    | OK |
| EPSON | Stylus Color 600      |    |    | OK |
| EPSON | Stylus Color 670      | OK | OK | OK |
| EPSON | Stylus Color 800      | OK | OK | OK |
| EPSON | Stylus Color 810      | OK | OK | OK |
| EPSON | Stylus Color 850      | OK | OK | OK |
| EPSON | Stylus Color 900      | OK | OK |    |
| EPSON | Stylus CX-1500        | OK | OK |    |
| EPSON | Stylus CX-2900        | OK | OK |    |
| EPSON | Stylus CX-3500        | OK | OK |    |
| EPSON | Stylus CX-3700        | OK | OK |    |
| EPSON | Stylus CX-3900        | OK | OK |    |
| EPSON | Stylus CX-4100        | OK | OK |    |
| EPSON | Stylus CX-4700        | OK | OK |    |
| EPSON | Stylus CX-4900        | OK | OK |    |
| EPSON | Stylus CX-5300        | OK | OK |    |
| EPSON | Stylus CX-5500        | OK | OK |    |
| EPSON | Stylus CX-5505        | OK | OK |    |
| EPSON | Stylus CX-5900        | OK | OK |    |
| EPSON | Stylus CX-6900F       | OK | OK |    |
| EPSON | Stylus CX-7300        | OK | OK |    |
| EPSON | Stylus CX-7800        | OK | OK |    |
| EPSON | Stylus CX-8300        | OK | OK |    |
| EPSON | Stylus CX-9300F       | OK | OK |    |
| EPSON | Stylus Office T30     | OK | OK |    |
| EPSON | Stylus Office T40W    | OK | OK |    |
| EPSON | Stylus Office TX300F  | OK | OK |    |
| EPSON | Stylus Office TX320F  | OK | OK |    |
| EPSON | Stylus Office TX510FN | OK | OK |    |
| EPSON | Stylus Office TX600FW | OK | OK |    |



|       |                       |    |    |    |
|-------|-----------------------|----|----|----|
| EPSON | Stylus Office TX610FW | OK | OK |    |
| EPSON | Stylus Office T1100   | OK | OK |    |
| EPSON | Stylus Photo 915      | OK | OK |    |
| EPSON | Stylus Photo 1270     | OK | OK | OK |
| EPSON | Stylus Photo 1290     | OK | OK |    |
| EPSON | Stylus Photo 1390     | OK | OK |    |
| EPSON | Stylus Photo 2100     | OK | OK |    |
| EPSON | Stylus Photo 710      | OK | OK |    |
| EPSON | Stylus Photo 720      | OK | OK |    |
| EPSON | Stylus Photo 790      | OK | OK |    |
| EPSON | Stylus Photo 810      | OK | OK | OK |
| EPSON | Stylus Photo 830U     | OK | OK |    |
| EPSON | Stylus Photo 900      | OK | OK | OK |
| EPSON | Stylus Photo 915      | OK | OK |    |
| EPSON | Stylus Photo EX2      | OK | OK | OK |
| EPSON | Stylus Photo EX3      | OK | OK | OK |
| EPSON | Stylus Photo R1800    | OK | OK | OK |
| EPSON | Stylus Photo R210     | OK | OK |    |
| EPSON | Stylus Photo R230     | OK | OK |    |
| EPSON | Stylus Photo R250     | OK | OK |    |
| EPSON | Stylus Photo R270     | OK | OK |    |
| EPSON | Stylus Photo R310     | OK | OK |    |
| EPSON | Stylus Photo R350     | OK | OK |    |
| EPSON | Stylus Photo R2400    | OK | OK |    |
| EPSON | Stylus Photo R800     | OK | OK |    |
| EPSON | Stylus Photo RX430    | OK | OK |    |
| EPSON | Stylus Photo RX 510   | OK | OK |    |
| EPSON | Stylus Photo RX 530   | OK | OK |    |
| EPSON | Stylus Photo RX 590   | OK | OK |    |
| EPSON | Stylus Photo RX 630   | OK | OK |    |
| EPSON | Stylus Photo RX 650   | OK | OK |    |
| EPSON | Stylus Photo RX 690   | OK | OK |    |
| EPSON | Stylus Photo R2880    | OK | OK |    |
| EPSON | Stylus Photo TX700W   | OK | OK |    |
| EPSON | Stylus Photo TX800FW  | OK | OK |    |
| EPSON | Stylus Photo TX820FWD | OK | OK |    |
| EPSON | Stylus Pro 7600       | OK | OK | OK |
| EPSON | Stylus TX550W         | OK | OK |    |
| EPSON | Stylus TX420W         | OK | OK |    |
| EPSON | Stylus TX410          | OK | OK |    |
| EPSON | Stylus TX430          | OK | OK |    |
| EPSON | Stylus TX235          | OK | OK |    |
| EPSON | Stylus TX220          | OK | OK |    |
| EPSON | Stylus TX200          | OK | OK |    |
| EPSON | Stylus TX210          | OK | OK |    |
| EPSON | Stylus TX130          | OK | OK |    |
| EPSON | Stylus TX110          | OK | OK |    |
| EPSON | Stylus TX100          | OK | OK |    |
| EPSON | Stylus T22            | OK | OK |    |
| EPSON | Stylus T20            | OK | OK |    |

|              |                     |      |      |    |
|--------------|---------------------|------|------|----|
| <b>EPSON</b> | Stylus T21          | OK   | OK   |    |
| <b>EPSON</b> | Stylus Photo T50    | OK   | OK   |    |
| <b>EPSON</b> | TM883 (III)         |      |      | OK |
| <b>EPSON</b> | TM T88III           |      |      | OK |
| <b>EPSON</b> | WorkForce AL-M300D  | OK   | OK   | OK |
| <b>EPSON</b> | WorkForce AL-M300DN | OK   | OK   |    |
| <b>EPSON</b> | WorkForce AL-M400D  | OK   | OK   |    |
| <b>EPSON</b> | WF-2521             | OK   | OK   |    |
| <b>EPSON</b> | WF-2531             | OK   | OK   |    |
| <b>EPSON</b> | WF-2541             | OK   | OK   |    |
| <b>EPSON</b> | WF-3521             | OK   | OK   |    |
| <b>EPSON</b> | WorkForce WF-3541   | OK   | OK   |    |
| <b>EPSON</b> | WF-5191             | OK   | OK   |    |
| <b>EPSON</b> | WF-5621             | OK   | OK   |    |
| <b>EPSON</b> | WF-7011             | OK   | OK   |    |
| <b>EPSON</b> | WF-7511             | OK   | OK   |    |
| <b>EPSON</b> | WF-7521             | OK   | OK   |    |
| <b>EPSON</b> | WP-4531             | OK   | OK   |    |
| <b>EPSON</b> | WP-4091             | OK   | OK   |    |
| <b>EPSON</b> | XP30                | OK   | OK   |    |
| <b>EPSON</b> | XP-102              | OK   | OK   |    |
| <b>EPSON</b> | XP-202              | OK   | OK   |    |
| <b>EPSON</b> | XP-302              | OK   | OK   |    |
| <b>EPSON</b> | XP-402              | OK   | OK   |    |
| <b>EPSON</b> | XP-701              | OK   | OK   |    |
| <b>EPSON</b> | GP-C830             | OK   | OK   | OK |
| <b>EPSON</b> | GP-M800             | OK   | OK   | OK |
| <b>EPSON</b> | GP-C800             | OK   | OK   | OK |
| <b>EPSON</b> | AL-C500             | OK   | OK   |    |
| <b>EPSON</b> | AL-C9300            | OK   | OK   |    |
| <b>EPSON</b> | TM-U220             | Fail | Fail | OK |
| <b>Canon</b> | BJ-330              |      |      | OK |
| <b>Canon</b> | BJC-4200            |      |      | OK |
| <b>Canon</b> | BJC-4300            |      |      | OK |
| <b>Canon</b> | BJC-4500            |      |      |    |
| <b>Canon</b> | BJC-4550            |      |      | OK |
| <b>Canon</b> | BJC-4600            |      |      | OK |
| <b>Canon</b> | BJF9000             | OK   | OK   |    |
| <b>Canon</b> | D380                | OK   | OK   |    |
| <b>Canon</b> | E400                | OK   | OK   |    |
| <b>Canon</b> | E600                | OK   | OK   |    |
| <b>Canon</b> | I-255               | OK   | OK   |    |
| <b>Canon</b> | I-355               | OK   | OK   |    |
| <b>Canon</b> | I-450               | OK   | OK   |    |
| <b>Canon</b> | I-455               | OK   | OK   |    |
| <b>Canon</b> | I-470D              | OK   | OK   |    |
| <b>Canon</b> | I-475D              | OK   | OK   |    |
| <b>Canon</b> | I-550               | OK   | OK   |    |
| <b>Canon</b> | I-560               | OK   | OK   |    |
| <b>Canon</b> | I-850               | OK   | OK   |    |
| <b>Canon</b> | I-865               | OK   | OK   |    |
| <b>Canon</b> | I-950               | OK   | OK   |    |

|       |                 |    |    |    |
|-------|-----------------|----|----|----|
| Canon | I-6100          | OK | OK | OK |
| Canon | I-6500          | OK | OK | OK |
| Canon | I-9100          | OK | OK |    |
| Canon | I-9950          | OK | OK |    |
| Canon | IX4000          | OK | OK |    |
| Canon | IX5000          | OK | OK |    |
| Canon | IX6770          | OK | OK |    |
| Canon | Imageclass D380 | OK | OK |    |
| Canon | MP-160          | OK | OK |    |
| Canon | MP-638          | OK | OK |    |
| Canon | MP 770          | OK | OK |    |
| Canon | PIXMA MX318     | OK | OK |    |
| Canon | PIXMA MX320     | OK | OK |    |
| Canon | PIXMA MX357     | OK | OK |    |
| Canon | PIXMA MX377     | OK | OK |    |
| Canon | PIXMA MX397     | OK | OK |    |
| Canon | PIXMA MX416     | OK | OK |    |
| Canon | PIXMA MX457     | OK | OK |    |
| Canon | PIXMA MX477     | OK | OK |    |
| Canon | PIXMA MX527     | OK | OK |    |
| Canon | PIXMA MX700     | OK | OK |    |
| Canon | PIXMA MX727     | OK | OK |    |
| Canon | PIXMA MX927     | OK | OK |    |
| Canon | PIXUS IP2500    | OK | OK |    |
| Canon | PIXUS 990i      | OK | OK |    |
| Canon | PIXMA E510      | OK | OK |    |
| Canon | PIXMA iP1000    | OK | OK |    |
| Canon | PIXMA iP1700    | OK | OK |    |
| Canon | PIXMA iP1800    | OK | OK |    |
| Canon | PIXMA Ip1880    | OK | OK |    |
| Canon | PIXMA Ip1980    | OK | OK |    |
| Canon | PIXMA Ip2000    | OK | OK |    |
| Canon | PIXMA Ip2870    | OK | OK |    |
| Canon | PIXMA iP3000    | OK | OK |    |
| Canon | PIXMA Ip3300    | OK | OK |    |
| Canon | PIXMA Ip3500    | OK | OK |    |
| Canon | PIXMA Ip3680    | OK | OK |    |
| Canon | PIXMA iP4000    | OK | OK | OK |
| Canon | PIXMA Ip4200    | OK | OK |    |
| Canon | PIXMA Ip4300    | OK | OK |    |
| Canon | PIXMA Ip4500    | OK | OK |    |
| Canon | PIXMA Ip4760    | OK | OK |    |
| Canon | PIXMA ip4970    | OK | OK |    |
| Canon | PIXMA Ip5000    | OK | OK |    |
| Canon | PIXMA Ip6000    | OK | OK |    |
| Canon | PIXMA Ip7270    | OK | OK |    |
| Canon | PIXMA Ip8500    | OK | OK |    |
| Canon | PIXMA Ip8770    | OK | OK |    |
| Canon | PIXMA MG2270    | OK | OK |    |
| Canon | PIXMA MG2470    | OK | OK |    |
| Canon | PIXMA MG2570    | OK | OK |    |
| Canon | PIXMA MG2970    | OK | OK |    |
| Canon | PIXMA MG3170    | OK | OK |    |
| Canon | PIXMA MG3270    | OK | OK |    |
| Canon | PIXMA MG3570    | OK | OK |    |

|            |               |    |    |    |
|------------|---------------|----|----|----|
| Canon      | PIXMA MG4270  | OK | OK |    |
| Canon      | PIXMA MG5470  | OK | OK |    |
| Canon      | PIXMA MG5570  | OK | OK |    |
| Canon      | PIXMA MG5670  | OK | OK |    |
| Canon      | PIXMA MG6170  | OK | OK |    |
| Canon      | PIXMA MG6270  | OK | OK |    |
| Canon      | PIXMA MG6370  | OK | OK |    |
| Canon      | PIXMA MG7170  | OK | OK |    |
| Canon      | PIXMA MG7570  | OK | OK |    |
| Canon      | PIXMA MP110   | OK | OK |    |
| Canon      | PIXMA MP130   | OK | OK |    |
| Canon      | PIXMA MP145   | OK | OK |    |
| Canon      | PIXMA MP150   | OK | OK |    |
| Canon      | PIXMA MP180   | OK | OK |    |
| Canon      | PIXMA MP258   | OK | OK |    |
| Canon      | PIXMA MP450   | OK | OK |    |
| Canon      | PIXMA MP730   | OK | OK |    |
| Canon      | PIXMA MP780   | OK | OK |    |
| Canon      | PIXMA MP830   | OK | OK |    |
| Canon      | S-200SPX      | OK | OK |    |
| Canon      | S-520         |    |    | OK |
| Lexmark    | C720          |    |    | OK |
| Lexmark    | E230          | OK | OK |    |
| Lexmark    | E322          | OK | OK | OK |
| Lexmark    | Optra S1250   |    |    | OK |
| Lexmark    | P4350         | OK | OK |    |
| Lexmark    | P6250         | OK | OK |    |
| Lexmark    | T420          | OK | OK | OK |
| Lexmark    | T620          | OK | OK | OK |
| Lexmark    | W812          | OK | OK | OK |
| Lexmark    | Z42           | OK | OK |    |
| Lexmark    | Z43           | OK | OK | OK |
| Lexmark    | Z45           | OK | OK |    |
| Lexmark    | Z55           | OK | OK | OK |
| Lexmark    | Z515          | OK | OK | OK |
| Lexmark    | Z615          | OK | OK |    |
| Lexmark    | Z705          | OK | OK | OK |
| FUJI Xerox | Able 3321     |    |    | OK |
| FUJI Xerox | DL700         |    |    | OK |
| FUJI Xerox | DL900         |    |    | OK |
| FUJI Xerox | DL-3400       |    |    | OK |
| FUJI Xerox | DL-3800       |    |    | OK |
| FUJI Xerox | DL-3850       |    |    | OK |
| FUJI Xerox | DL-5800       |    |    | OK |
| FUJI Xerox | DL-6400Pro    |    |    | OK |
| FUJI Xerox | DL-6800       |    |    | OK |
| FUJI Xerox | DocuP 2050    | OK | OK | OK |
| FUJI Xerox | DocuP 240A    | OK | OK | OK |
| FUJI Xerox | DocuP C1110B  | OK | OK |    |
| FUJI Xerox | DocuP CM205 f | OK | OK |    |
| FUJI Xerox | DocuP CP105 b | OK | OK |    |
| FUJI Xerox | DocuP P205 b  | OK | OK |    |

|                       |                          |    |    |    |
|-----------------------|--------------------------|----|----|----|
| <b>FUJI Xerox</b>     | DocuP M205 b             | OK | OK |    |
| <b>FUJI Xerox</b>     | DocuP M205 f             | OK | OK |    |
| <b>FUJI Xerox</b>     | DocuP M205 fw            | OK | OK |    |
| <b>FUJI Xerox</b>     | FP 410                   |    |    | OK |
| <b>FUJI Xerox</b>     | Jet Wind 500C            |    |    | OK |
| <b>FUJI Xerox</b>     | Phaser 3310              | OK | OK | OK |
| <b>FUJI Xerox</b>     | PP 10                    |    |    | OK |
| <b>Konica Minolta</b> | Di 152                   |    |    | OK |
| <b>Konica Minolta</b> | Di 200/Di 250/Di 251     |    |    | OK |
| <b>Konica Minolta</b> | magicolor 2450           | OK | OK | OK |
| <b>Konica Minolta</b> | magicolor 5450           | OK | OK | OK |
| <b>Konica Minolta</b> | magicolor 7300           | OK | OK |    |
| <b>Konica Minolta</b> | Magicolor 7300           | OK | OK |    |
| <b>Konica Minolta</b> | PagePro 1350W            | OK | OK |    |
| <b>Konica Minolta</b> | PagePro 9100             | OK | OK |    |
| <b>Samsung</b>        | CLP-315                  | OK | OK |    |
| <b>Samsung</b>        | CLP-500                  | OK | OK | OK |
| <b>Samsung</b>        | CLP-510                  | OK | OK | OK |
| <b>Samsung</b>        | CLP-620ND                | OK | OK |    |
| <b>Samsung</b>        | CLP-661NDK               | OK | OK |    |
| <b>Samsung</b>        | CLP-670NDK               | OK | OK |    |
| <b>Samsung</b>        | CLP-680ND                | OK | OK |    |
| <b>Samsung</b>        | CLP-775N                 | OK | OK |    |
| <b>Samsung</b>        | CLX2160                  | OK | OK |    |
| <b>Samsung</b>        | ML-1510/1710             | OK | OK | OK |
| <b>Samsung</b>        | ML-1520                  | OK | OK |    |
| <b>Samsung</b>        | ML-1660                  | OK | OK |    |
| <b>Samsung</b>        | ML-1710                  | OK | OK |    |
| <b>Samsung</b>        | ML-1750                  | OK | OK | OK |
| <b>Samsung</b>        | ML-1915                  | OK | OK |    |
| <b>Samsung</b>        | ML-2010                  | OK | OK |    |
| <b>Samsung</b>        | ML-2165W                 | OK | OK |    |
| <b>Samsung</b>        | ML-2250                  | OK | OK | OK |
| <b>Samsung</b>        | ML-2550                  | OK | OK | OK |
| <b>Samsung</b>        | ML-2580N                 | OK | OK |    |
| <b>Samsung</b>        | ML-2580NK                | OK | OK |    |
| <b>Samsung</b>        | ML-3471ND                | OK | OK | OK |
| <b>Samsung</b>        | ML-4555N                 | OK | OK |    |
| <b>Samsung</b>        | ML-5010ND                | OK | OK |    |
| <b>Samsung</b>        | ML-5015ND                | OK | OK |    |
| <b>Samsung</b>        | ML-8951N                 | OK | OK |    |
| <b>Samsung</b>        | SL-M2620ND               | OK | OK |    |
| <b>Samsung</b>        | SCX-4016                 | OK | OK | OK |
| <b>Samsung</b>        | SCX-4100/4106/4116/4216F | OK | OK | OK |
| <b>Samsung</b>        | SRP 270                  |    |    | OK |
| <b>Panasonic</b>      | KX-MB1500TW              | OK | OK |    |
| <b>Panasonic</b>      | KX-MB1520TW              | OK | OK |    |
| <b>Panasonic</b>      | KX-MB1530TW              | OK | OK |    |
| <b>Panasonic</b>      | KX-P1121                 |    |    | OK |
| <b>Panasonic</b>      | KX-P1123                 |    |    | OK |

|                  |                          |    |    |                   |
|------------------|--------------------------|----|----|-------------------|
| <b>Panasonic</b> | KX-P1124                 |    |    | OK                |
| <b>Panasonic</b> | KX-P1624                 |    |    | OK                |
| <b>Panasonic</b> | KX-P6500                 |    |    | OK                |
| <b>TOSHIBA</b>   | Estudio-25               |    |    | OK                |
| <b>NEC</b>       | NEC P2200                |    |    | OK                |
| <b>NEC</b>       | NEC P3200                |    |    | OK                |
| <b>NEC</b>       | NEC P5300                |    |    | OK                |
| <b>NEC</b>       | NEC P8000                |    |    | OK                |
| <b>IBM</b>       | IBM InforP 20            |    |    | OK                |
| <b>IBM</b>       | InfoP 1116               | OK | OK | OK                |
| <b>IBM</b>       | InfoP 1312               | OK | OK | OK                |
| <b>IBM</b>       | InfoP 1316               | OK | OK | OK                |
| <b>IBM</b>       | InfoP 1332               | OK | OK | OK                |
| <b>IBM</b>       | InfoP 1412               | OK | OK | OK                |
| <b>Star</b>      | NX-2420                  |    |    | OK                |
| <b>Sharp</b>     | AR-255                   |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-265FG                 |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M160(AR-NB2)          |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M205                  |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M207                  |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M235                  |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M275                  |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M350                  |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M400                  |    |    | OK(Parallel only) |
| <b>Sharp</b>     | AR-M450                  |    |    | OK(Parallel only) |
| <b>RICOH</b>     | NF3570                   |    |    | OK                |
| <b>Brother</b>   | MFC 4800                 | OK | OK | OK                |
| <b>Brother</b>   | MFC 4800J                | OK | OK | OK                |
| <b>Brother</b>   | MFC 6800                 | OK | OK | OK                |
| <b>Brother</b>   | MFC 7220                 | OK | OK | OK                |
| <b>Brother</b>   | MFC 7420                 | OK | OK | OK                |
| <b>Brother</b>   | MFC 7820N                | OK | OK | OK                |
| <b>Brother</b>   | MFC 8840D                | OK | OK | OK                |
| <b>Brother</b>   | MFC 210C                 | OK | OK |                   |
| <b>Brother</b>   | MFC 240C                 | OK | OK |                   |
| <b>Brother</b>   | MFC-J430W                | OK | OK |                   |
| <b>Brother</b>   | MFC-J825DW               | OK | OK |                   |
| <b>Brother</b>   | DCP-7030                 | OK | OK |                   |
| <b>Brother</b>   | HL1260                   |    |    | OK                |
| <b>Brother</b>   | HL-2040                  |    |    |                   |
| <b>Brother</b>   | HL-2140                  | OK | OK |                   |
| <b>Brother</b>   | HL-2170W                 | OK | OK |                   |
| <b>Brother</b>   | IntelliFax 2820          | OK | OK |                   |
| <b>Others</b>    | AURORA AD-166 MFP        |    |    |                   |
| <b>Others</b>    | AURORA AD-216 MFP        |    |    |                   |
| <b>Others</b>    | AURORA AD-226 MFP        |    |    |                   |
| <b>Others</b>    | DELL 1100                |    |    |                   |
| <b>Others</b>    | Zonerich AB-80K mini Per |    |    |                   |
| <b>Others</b>    | OKI 5530                 |    |    |                   |
| <b>Others</b>    | OKI Microline 391        |    |    | OK                |
| <b>Others</b>    | OKI B4350                | OK | OK | OK                |



|                |                       |    |    |    |
|----------------|-----------------------|----|----|----|
| <b>Others</b>  | GSAN 5890 thermal Per |    |    |    |
| <b>Others</b>  | MITAC MP-6600C        |    |    | OK |
| <b>Others</b>  | BENQ CM3000           | OK | OK |    |
| <b>Avision</b> | MF 3200               | OK | OK |    |
|                | MF 3230               | OK | OK |    |
| <b>Citizen</b> | GSX230                |    |    | OK |
| <b>DATAMAX</b> | I-4208                |    |    | OK |
|                | I-4308                |    |    | OK |
| <b>DOCUJET</b> | 1610F                 | OK | OK | OK |
|                | UA1610                | OK | OK | OK |
| <b>FUTEK</b>   | F8000                 |    |    | OK |
|                | F84+                  |    |    | OK |
|                | F86+                  |    |    | OK |
| <b>Kyocera</b> | FS-1010               | OK | OK | OK |
|                | FS-1010KX             | OK | OK |    |
|                | FS-1020               | OK | OK | OK |
|                | FS-1920               | OK | OK | OK |
|                | FS-2000D              | OK | OK | OK |
|                | FS-820                | OK | OK | OK |
|                | FS-920                | OK | OK | OK |
|                | FS-6020               | OK | OK | OK |
| FS-6026        | OK                    | OK | OK |    |